

## Step 1




Your Whirly Wing Spinner comes out of the package with the Body attached to the horizontal axle. Remove the Cotter Pin from the Body Ferrule and slide the Spinner Body and one Nylon Washer off of the horizontal axle. Remove the tie from the wings.

## Step 2

Slide the wings onto the horizontal axle and replace the Nylon Washer and Body. Slide the Cotter Pin through the hole on the Body Ferrule and bend the ends outward to hold the Pin in place. Completed Spinner assembly should match Diagram A. **PLEASE NOTE: The more sloped edge of the wing should go towards the front. Please see Diagram B.**

## Step 3

Slide the narrow end of Unferruled Support Pole into Star Lock Hub. Push the Support Pole until it locks into place and can not be removed. Drive Ground Stake into ground. Slide assembled Whirly Wing Spinner into Ground Stake. (Diagram C)

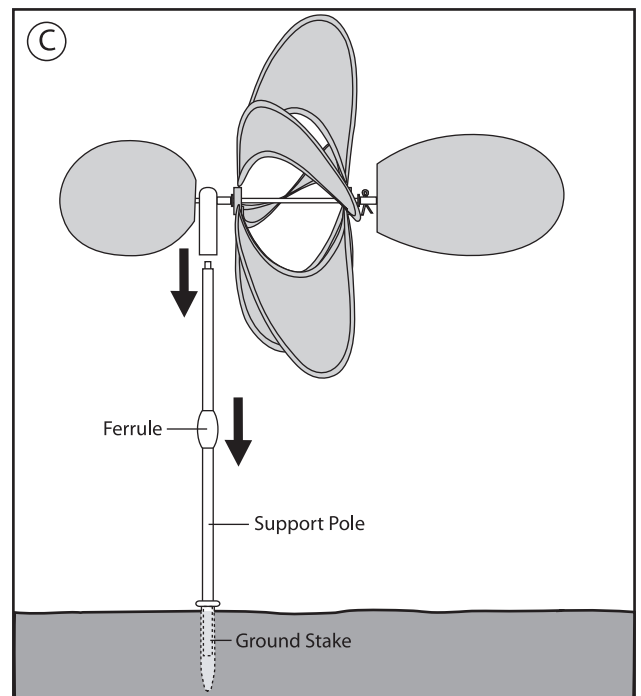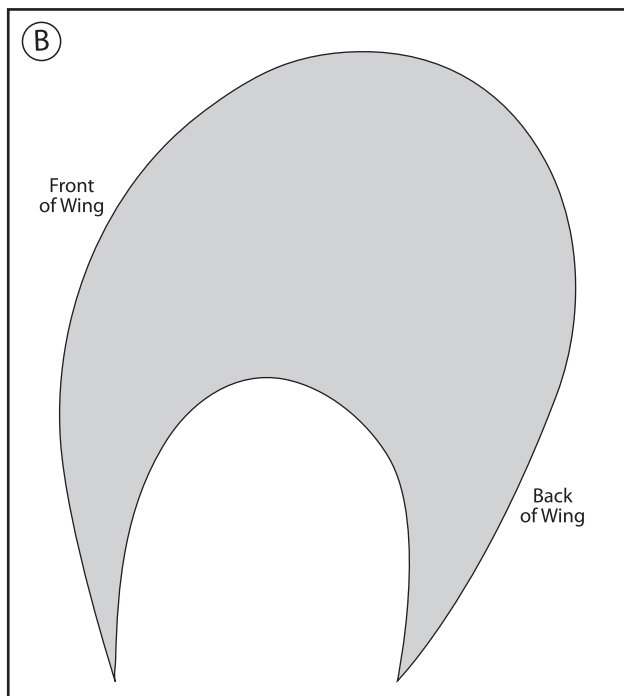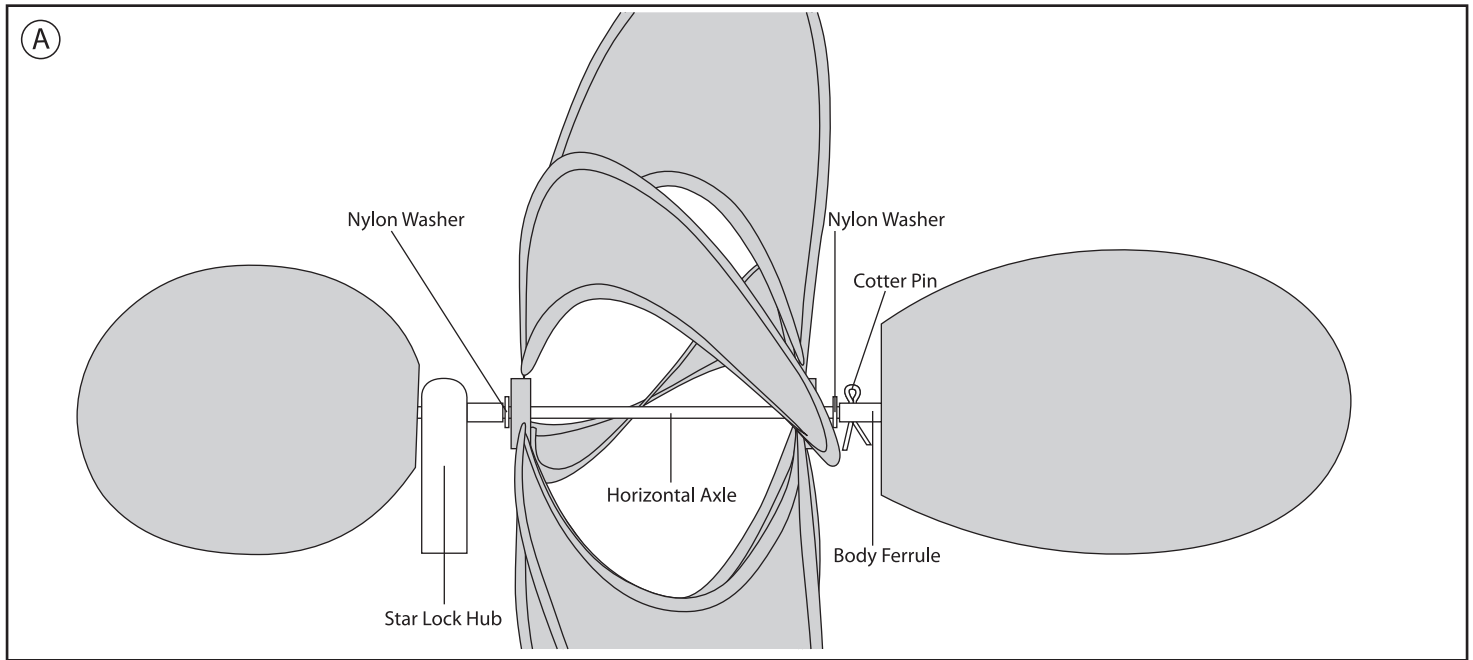

**PLEASE NOTE: It is recommended that you take your Whirly Wing Spinner inside during storms and harsh weather to preserve its durability.**